


University Center Building (UCB)

MAIN ENTRANCE ON FIRST FLOOR

If you need assistance, or an accommodation to access an office or classroom please contact:
For Students - Disability Resource Center at (503) 725-4150 For Employees -Human Resources at (503) 725-4926

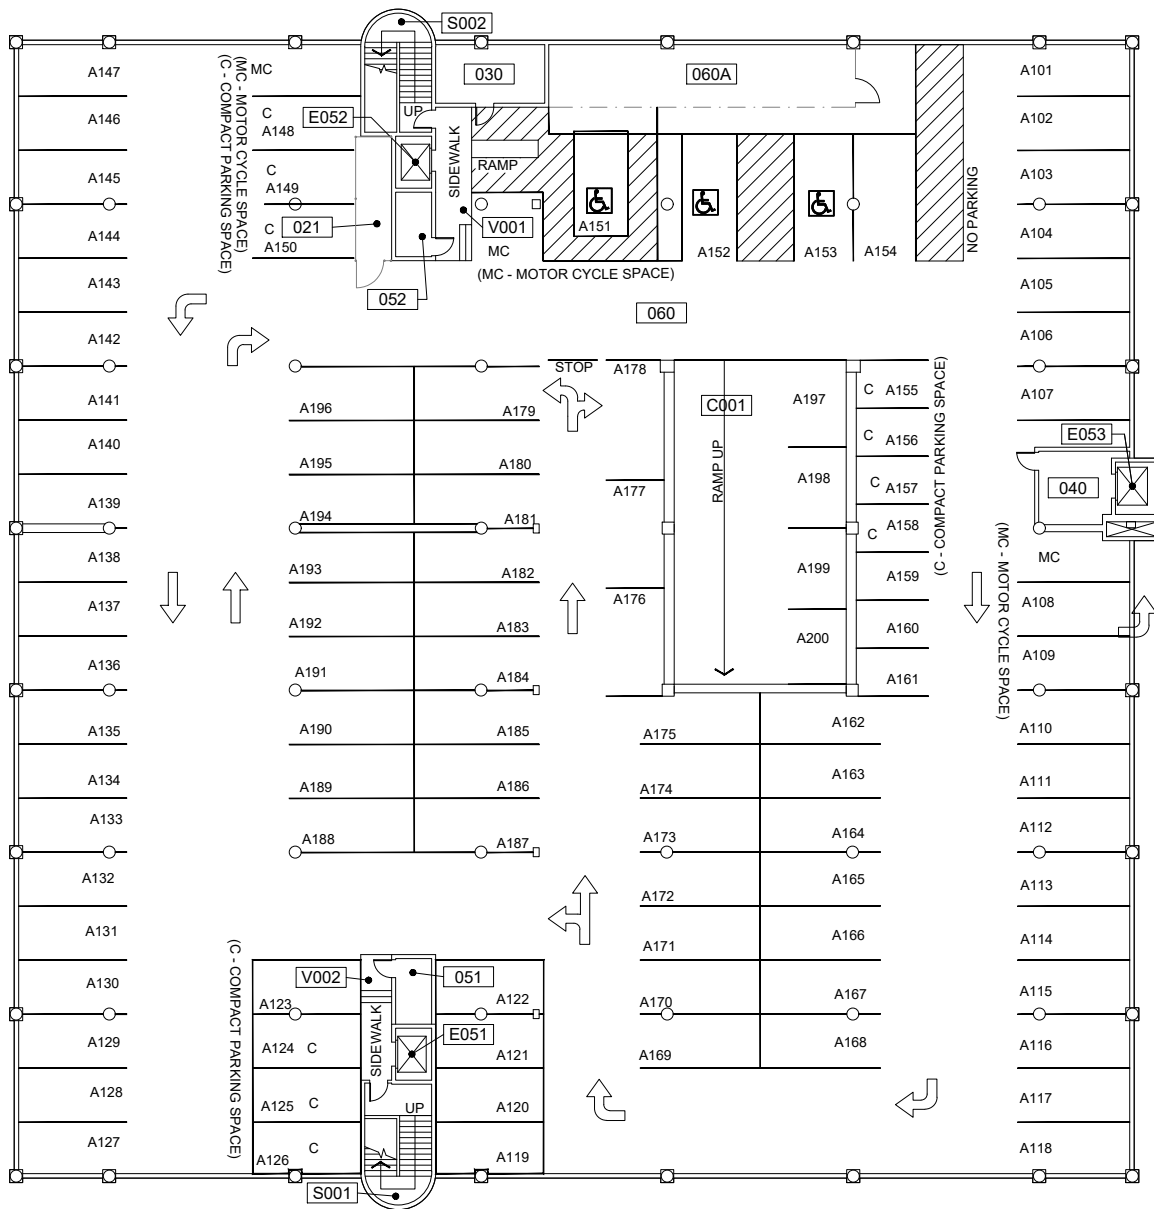

Scale


1/32" = 1'-0"




Basement
 University Center Building
 527 SW Hall St, Portland, OR 97201

DRAWN BY:
 ASL
 DATE:
 08/2020

160_A1

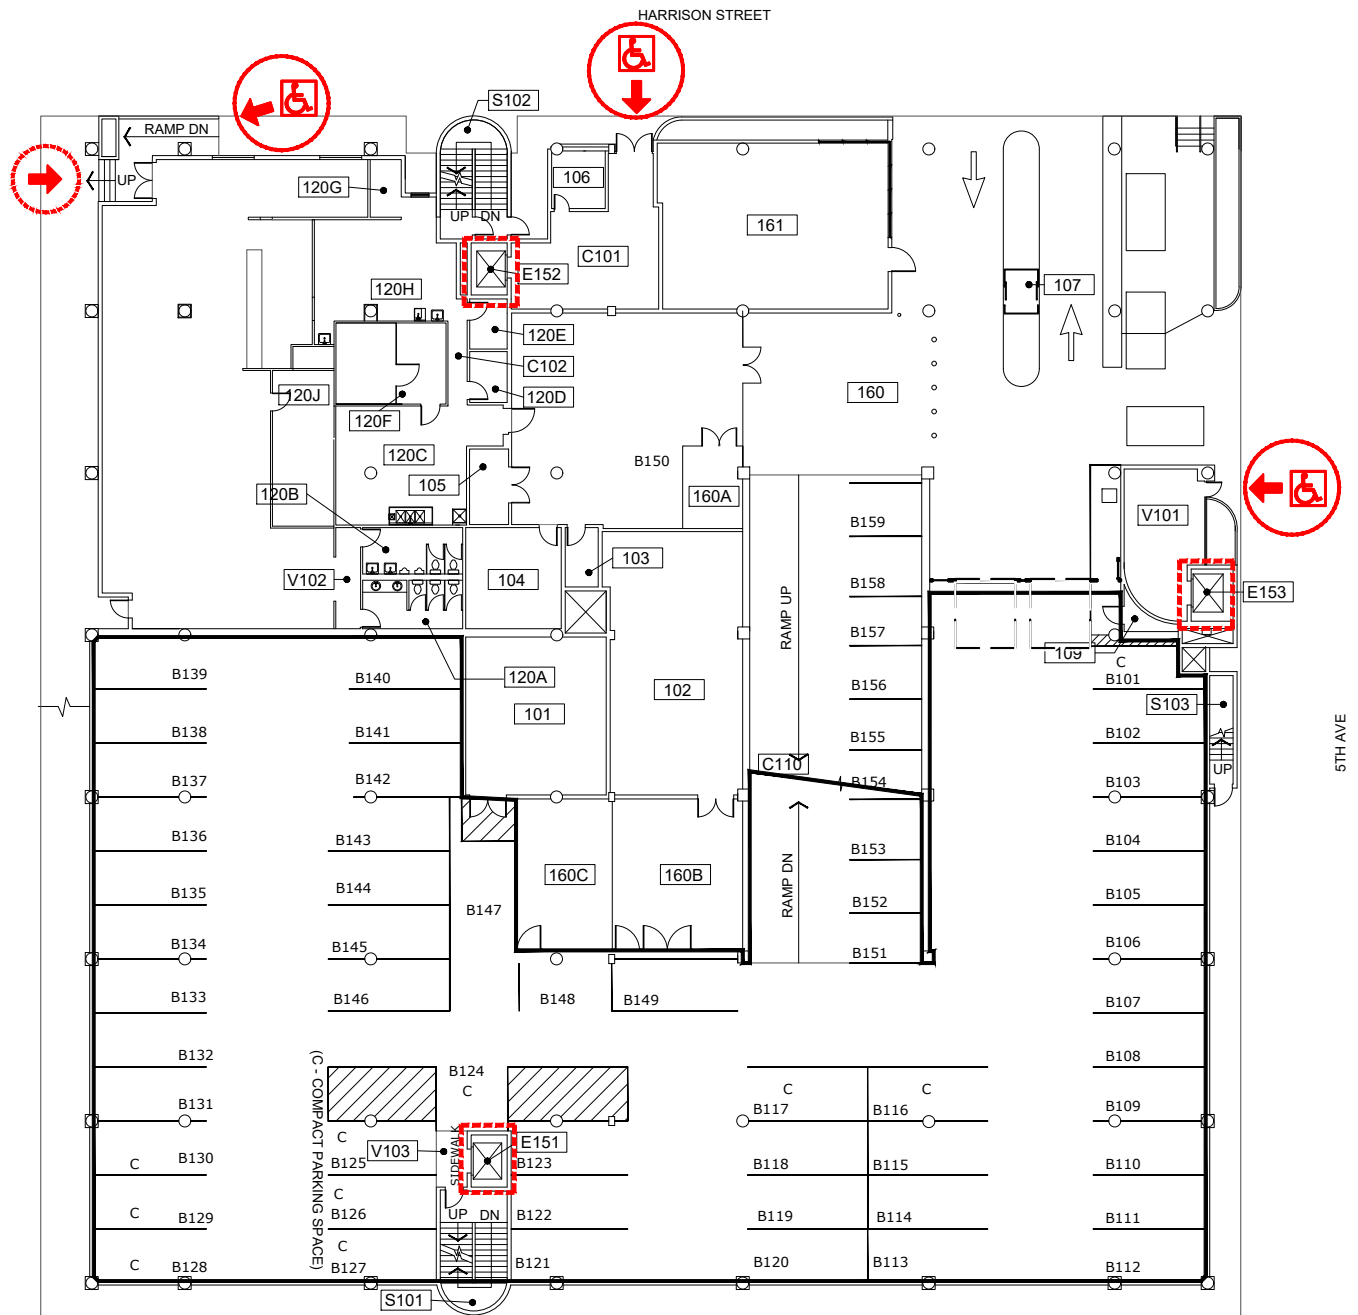

Scale
1/32" = 1'-0"

 

ELEVATOR ACCESS



WHEELCHAIR ACCESS




BUILDING ACCESS - NOT
WHEELCHAIR ACCESSIBLE



First Floor
University Center Building
527 SW Hall St, Portland, OR 97201

DRAWN BY:
ASL
DATE:
07/2021

160_A2

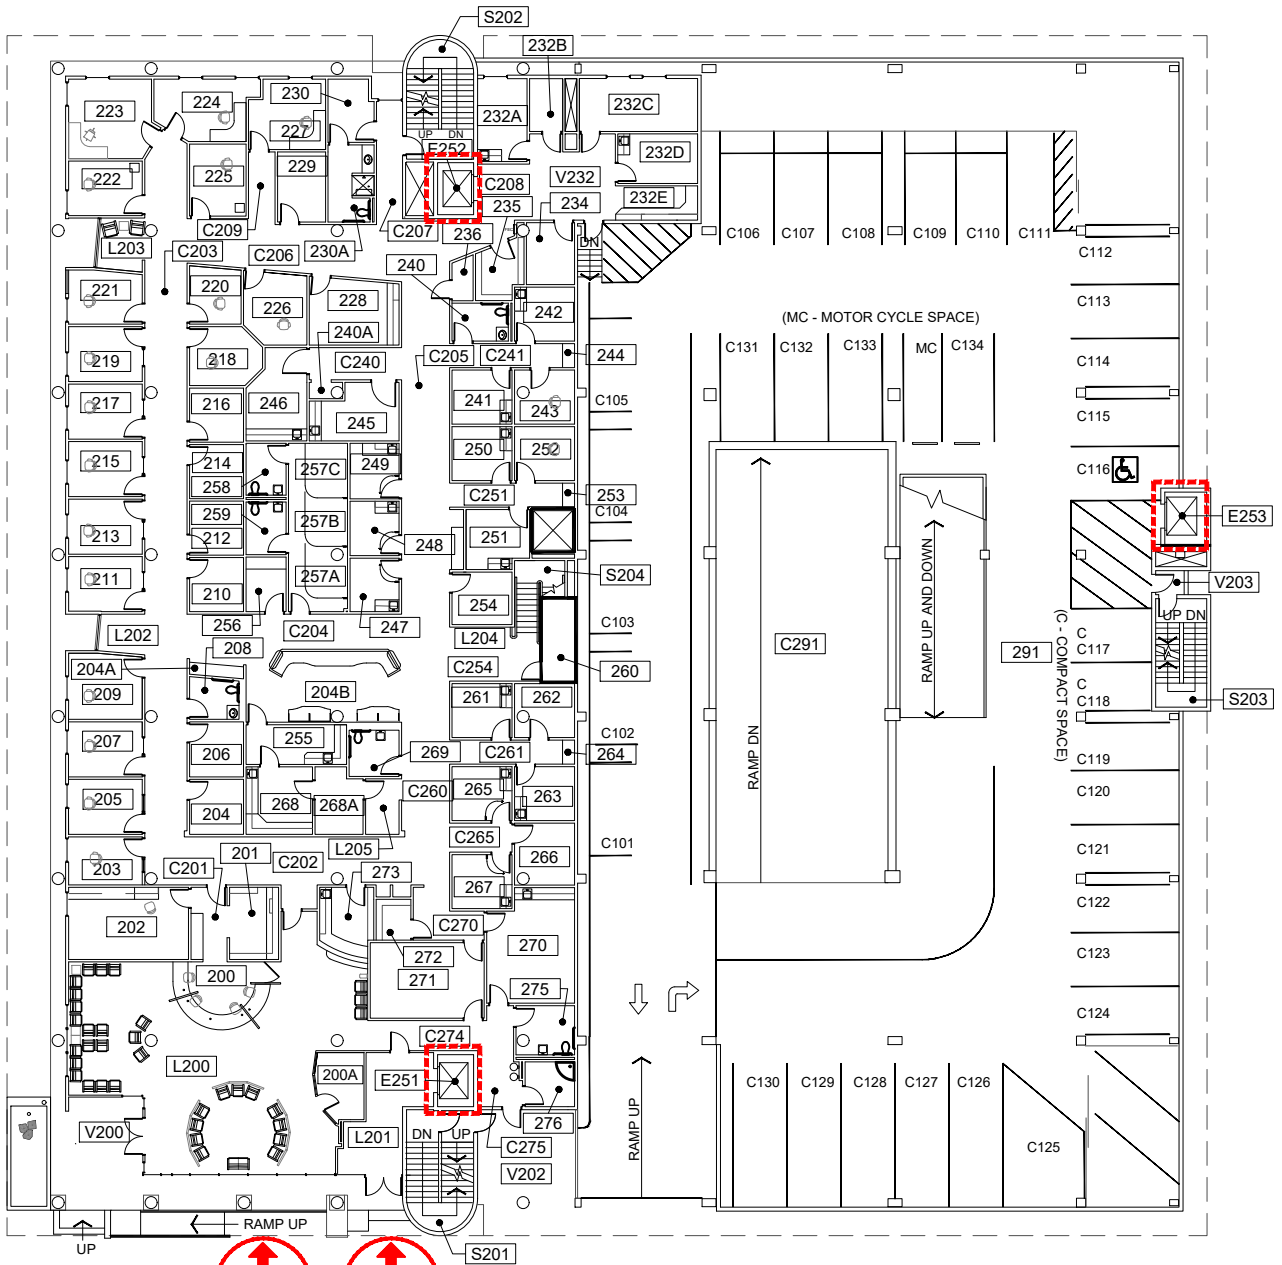

Scale
1/32" = 1'-0"




ELEVATOR ACCESS



WHEELCHAIR ACCESS



BUILDING ACCESS - NOT
WHEELCHAIR ACCESSIBLE

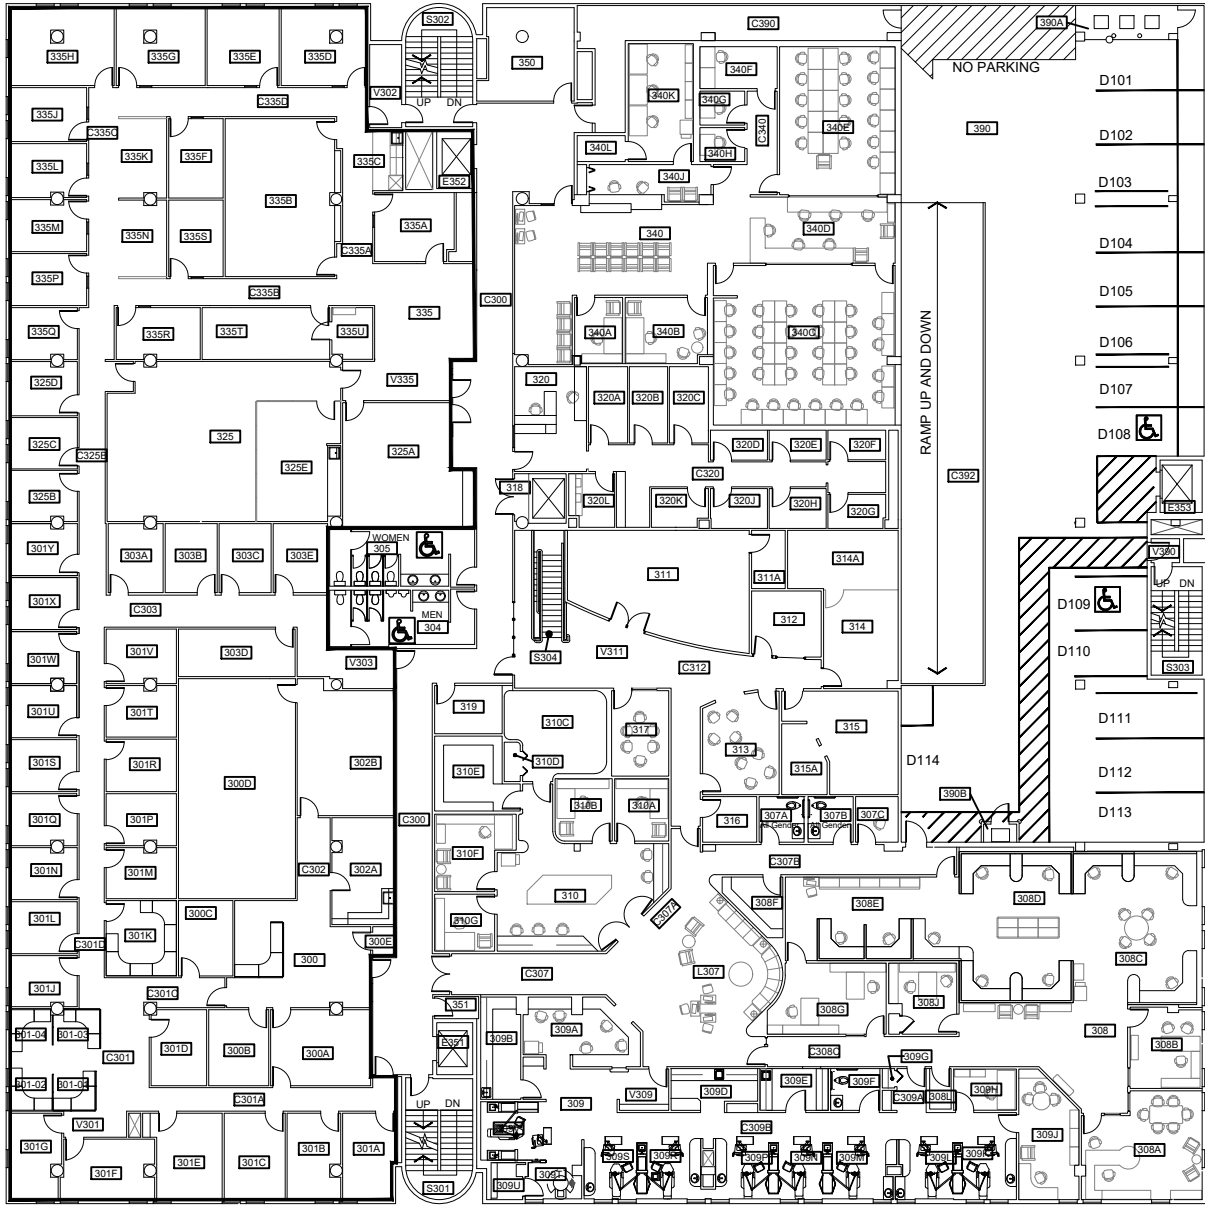

Scale


1/32" = 1'-0"



Third Floor
 University Center Building
 527 SW Hall St, Portland, OR 97201

DRAWN BY:
 TJK
 DATE:
 04/2023

160_A4

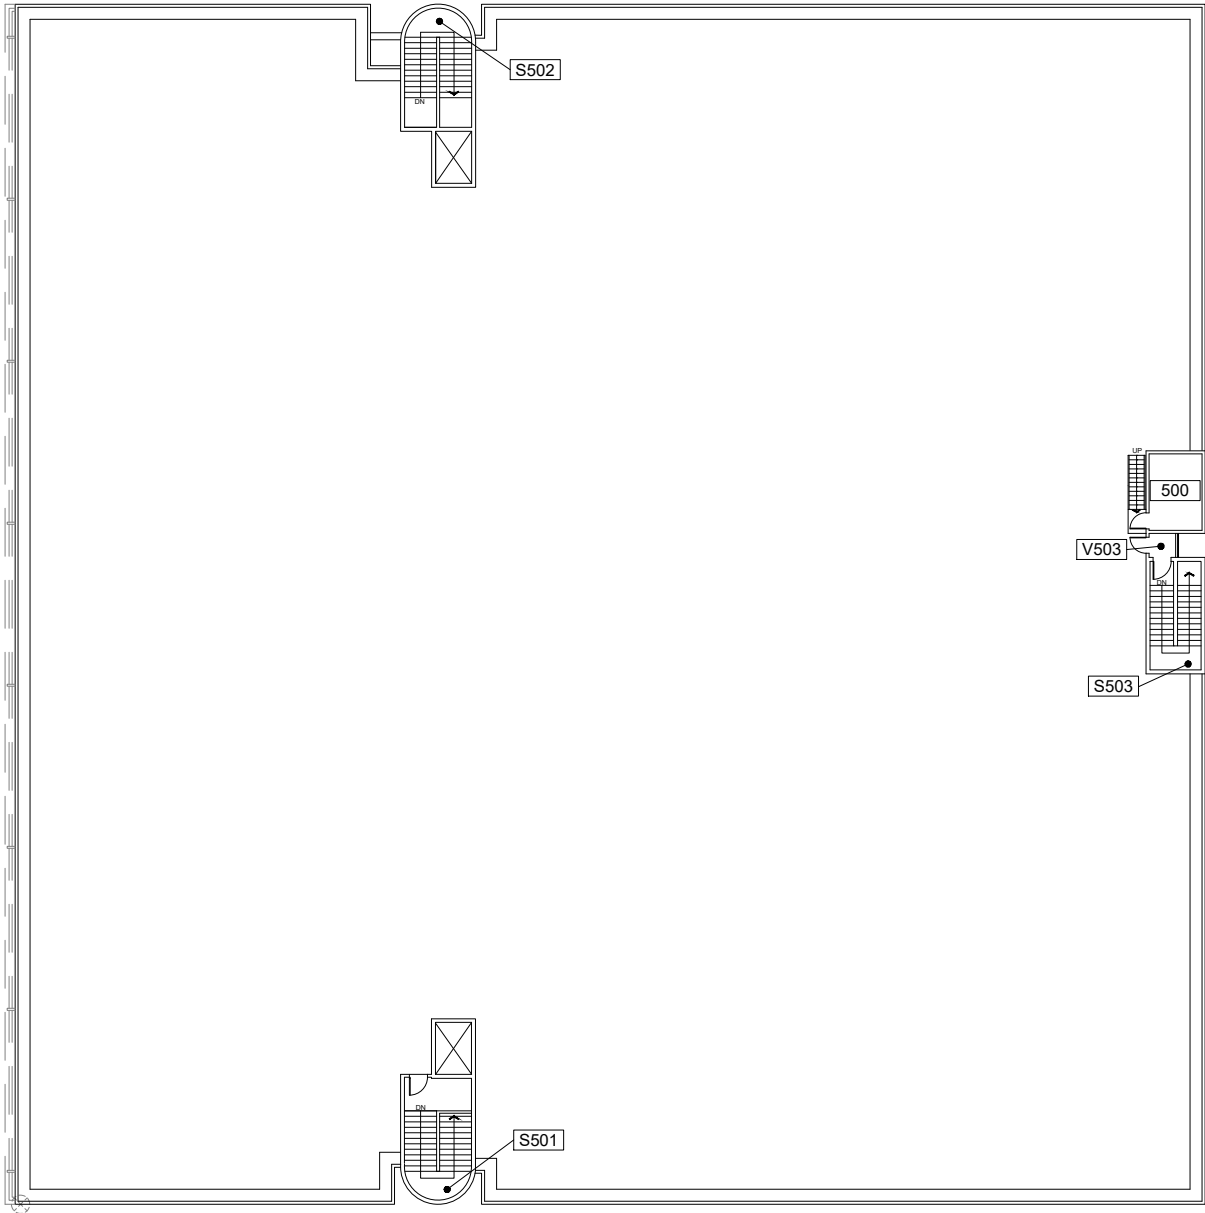


Scale
 1/32" = 1'-0"



Fifth Floor Access
 University Center Building
 527 SW Hall St, Portland, OR 97201

DRAWN BY:
 ASL
 DATE:
 08/2020

160_A6

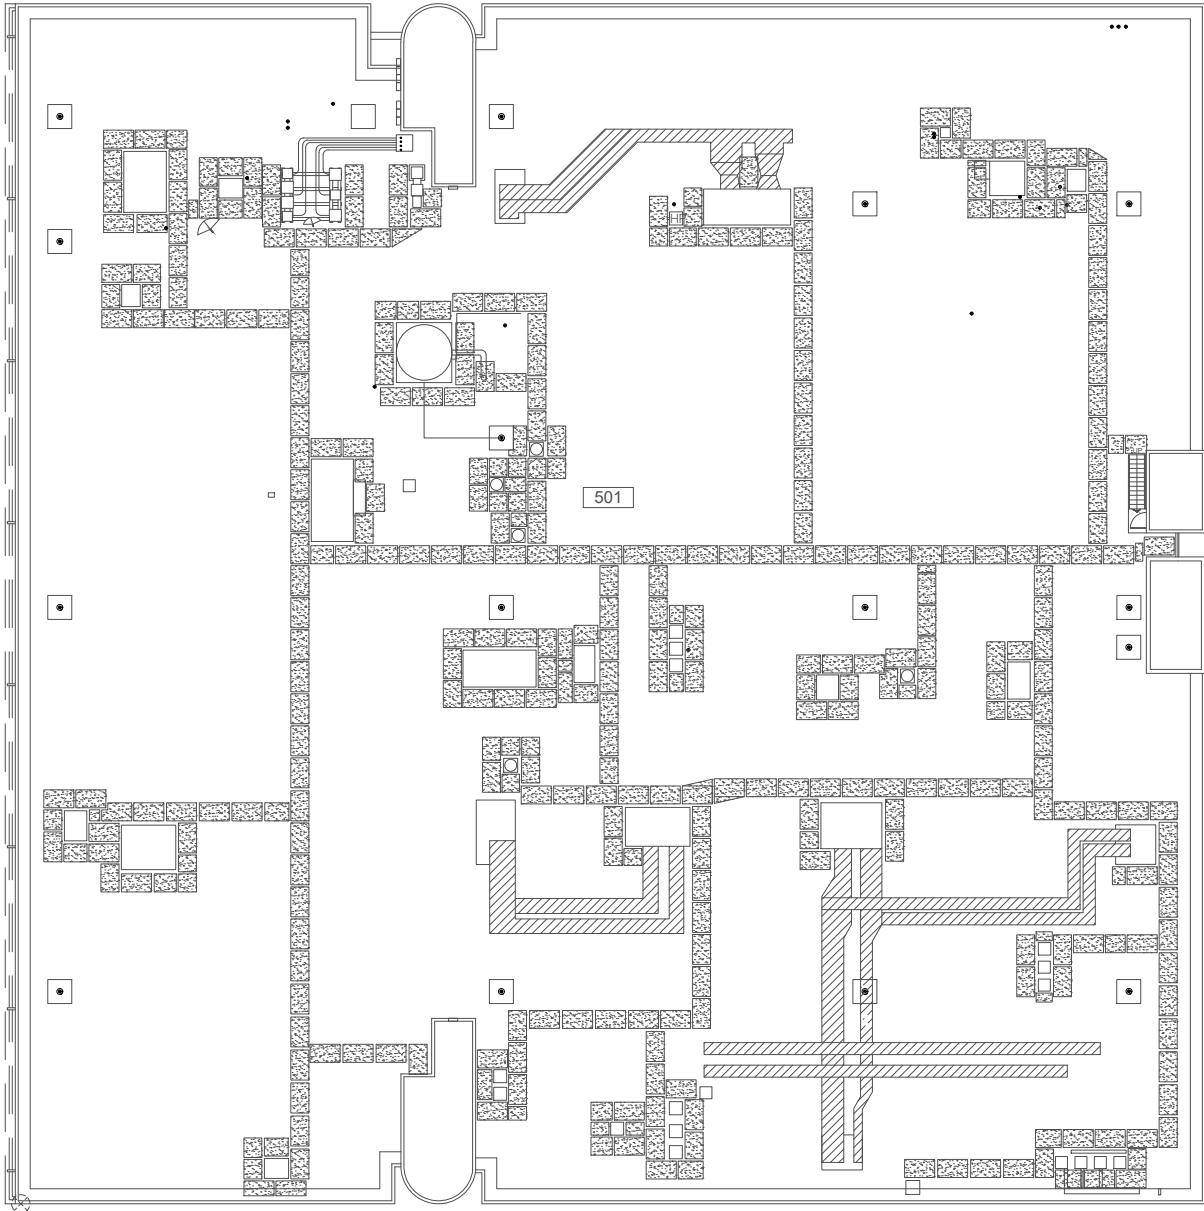

Scale

1/32" = 1'-0"



Roof
 University Center Building
 527 SW Hall St, Portland, OR 97201

DRAWN BY:
 ASL
 DATE:
 08/2020

160_A7